




VFM® Install Highlights

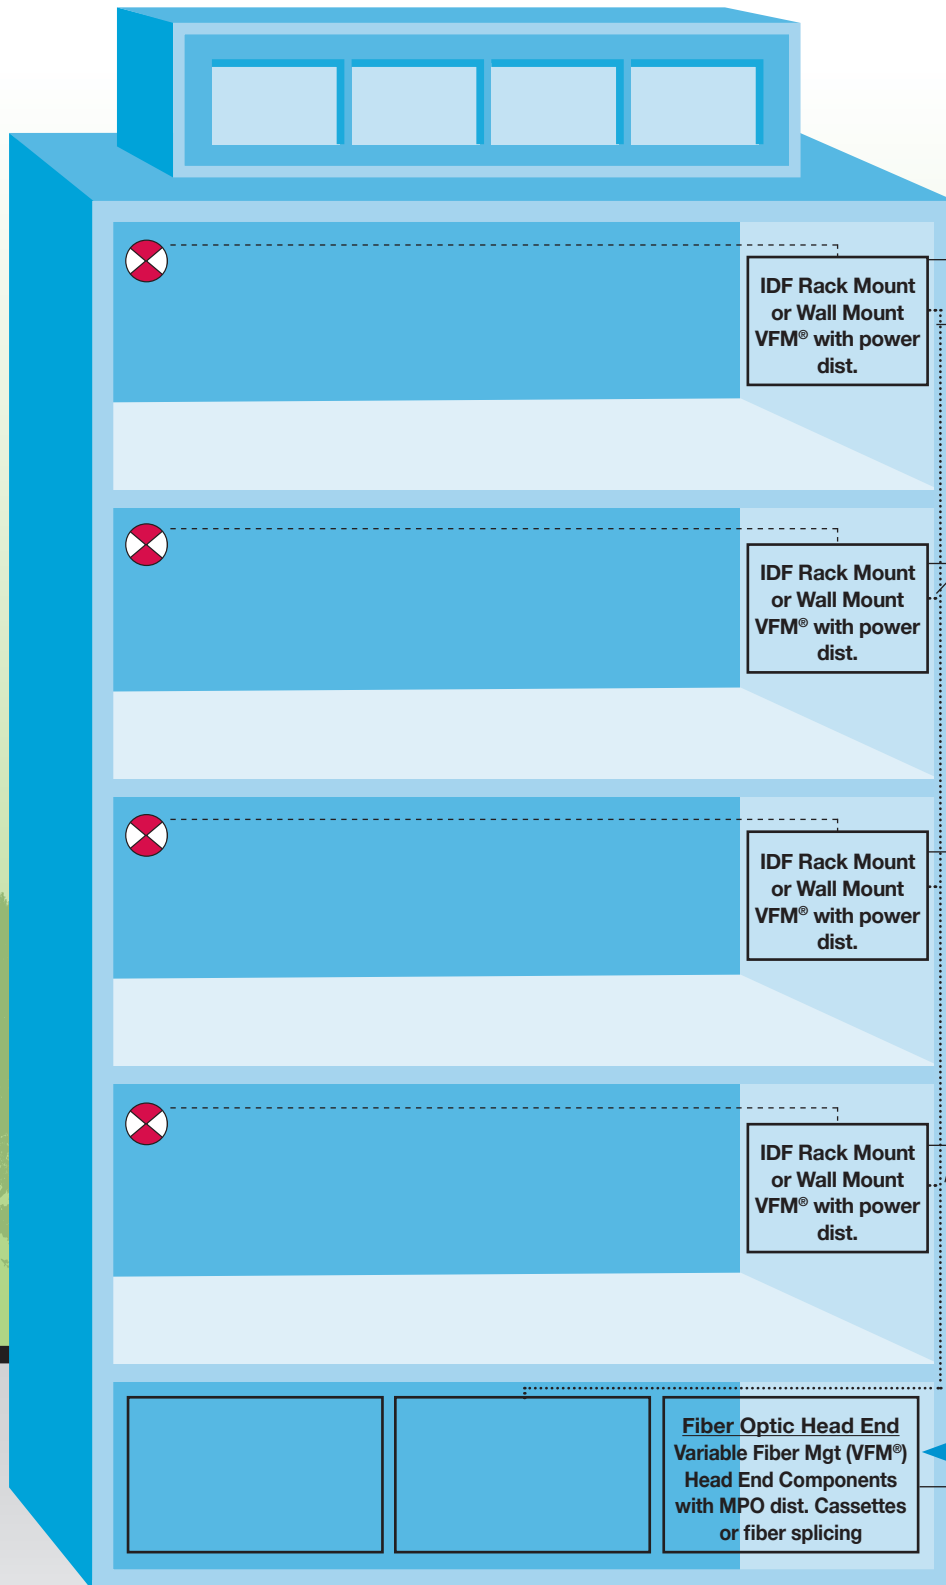

1 Position each VFM® panel with payout spool and/or fiber management spool at Remote Radio Heads on each floor, to be run to the head end.



2 Pull FIRST from floor FURTHEST from the head end, attaching cable from additional floors as you work towards the head end.

3 Closely monitor each VFM® spool on each floor to avoid excess slack in the pull, and to ensure the cable's minimum bend radius is not violated.

4 Finish runs to head end. Secure fiber to ensure bend radius is not violated.

-----	COAX
—————	FIBER
.....	POWER

See Detailed Instructions to Ensure Proper Installation

